
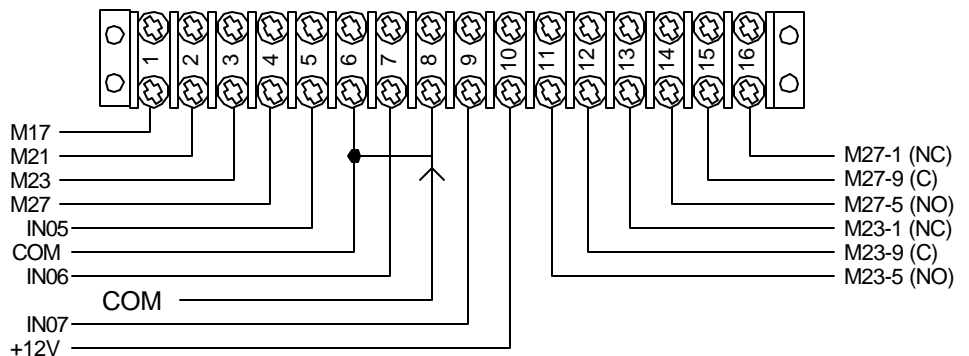


F1, F2, F3 = INVERTER
 F4, F5, F6 = COOLANT PUMP
 F7, F8 = 220V SINGLE PHASE (optional)

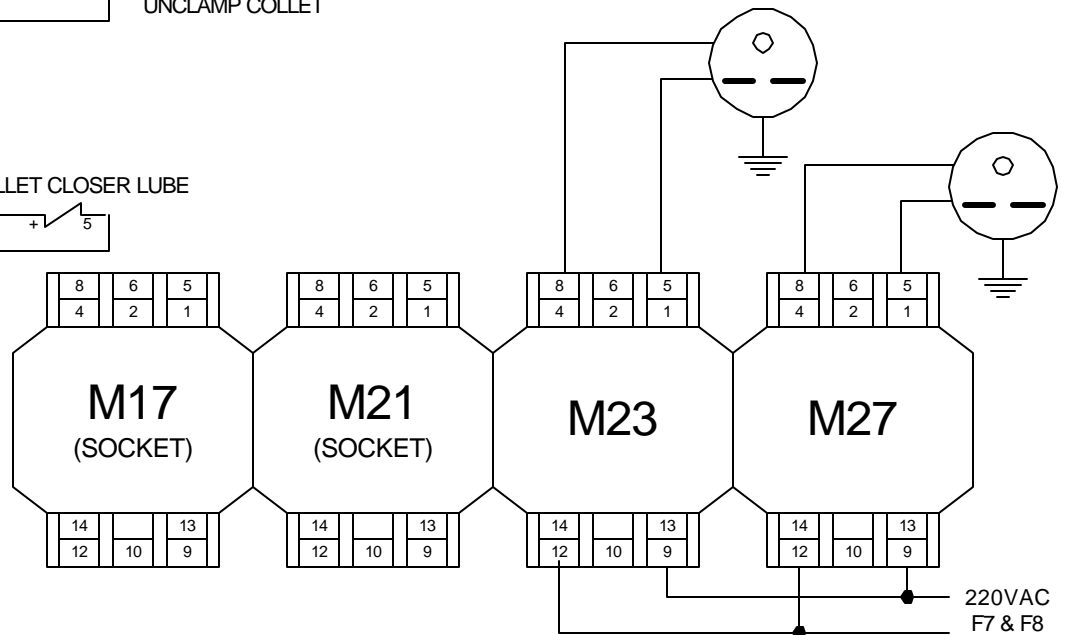

Servo SPINDLE DRIVE PANEL LAYOUT 4/2000