



1	Betriebsanleitung	Operating instructions	Instructions de service	--	----	39 020 01
1	Gewindestift DIN 915	Grub screw	Vis sans tête	M 5 x 10	12	27 589 14
1	Spannmutter	Clamping nut	Ecrou de serrage	UM/ER 16	11	50 613 01
1	Elastic-Stop-Mutter	Elastic Stop nut	Ecrou Elastic Stop	M 12 x 1	10	27 990 03
2	Lagernadel Kl. III	Bearing needle cl. III	Aiguille cl. III	ø 3 x 19,8	9	27 776 20
2	INA-Dichtring	INA ring seal	Bague d'étanchéité INA	G22 x 28 x 4	8	27 848 33
1	Spindelkugellagerpaar	Spindle bearing 2x	Paire de roulements de broche	--	7	50 612 01
1	Distanzhülsenpaar	Spacer sleeves 2x	Paire d'entretoise		6	50 499 01
1	Abdeckring	Cover ring	Bague terminale		5	57 781 02
1	Distanzhülse	Spacer sleeve	Entretoise		4	50,497 01
1	Verschluss	Cover	Couvercle		3	50 496 01
1	Arbeitsspindel	Working spindle	Broche		2	50 495 01
1	Hülse	Sleeve	Manchon		1	50 494 01
	Benennung	Description	Désignation	Dim.	Pos	Art.No
Spindel BEWI 6						50 493