

G4 Password protection

Added password access control to Auto.exe.

Password and options reside in a file called permits.cnc in the c:\runfiles directory.

1st line is password(not case sensitive)

2nd line:0=lock edit only,1=lock edit and offsets

If the file isn't there, there's no password protection.